


VS 380.3

Input Audio, Level Control SUB

 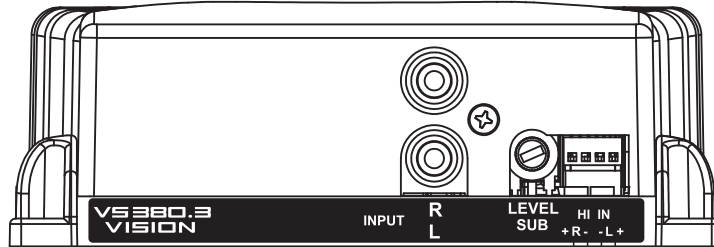


CD / MP3 / DVD-Player



REMOTE
(CD-PLAYER/MP3-PLAYER)


CHOOSE A INPUT
CONNECTOR



RCA or CABLE

azul ENTRADA L +
cinza ENTRADA L -
cinza ENTRADA R -
azul ENTRADA R +

Power and Speaker Audio

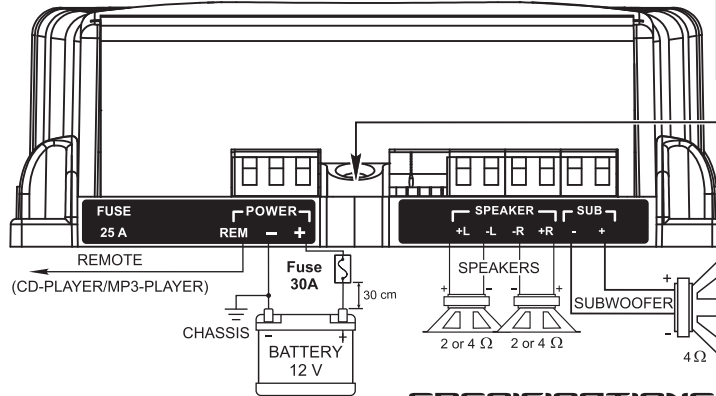

NOTE: To connect the cables or replace the fuse, unscrew the screw and remove the cover.

Cables: Power 4mm²
Cables: Speakers 1,5mm²

* SUB LEVEL: Up to +20 dB
relative to channel Stereo

SPECIFICATIONS

Channels:	3	Total Harmonic Distortion:	> 0,03 % THD
Power @ 13,8V @ 2 Ohms:	2 x 90 WRMS	Signal to Noise:	> 90 dB
Power @ 13,8V @ 4 Ohms:	2 x 55 WRMS	Resp. / freq. (-3dB) @ 2 Ohms:	Stereo 90Hz to 24KHz
Power @ 13,8V @ 4 Ohms:	1 x 200 WRMS	Resp. / freq. (-3dB) @ 4 Ohms:	Mono 10Hz to 90Hz
Minimum Output Impedance:	Stereo 2 Ohms	Crossover Low Pass:	Mono 90Hz
Minimum Output Impedance:	Mono 4 Ohms	Crossover High Pass:	Stereo 90Hz
Input Impedance RCA:	24 Kohms	Power:	9 a 15V
Input Impedance CABLE:	630 Ohms	Consumption music signal:	16 A
Minimum Input Sensitivity RCA:	0,250V	Consumo senoidal signal:	32 A
Minimum Input Sensitivity CABLE:	1,6V	Dimenitions (A x L x C) mm:	44 x 127 x 121
Level SUB *:	0 a 100%	Weight:	0,360 Kg